

Quick Installation Guide

Printer Overview

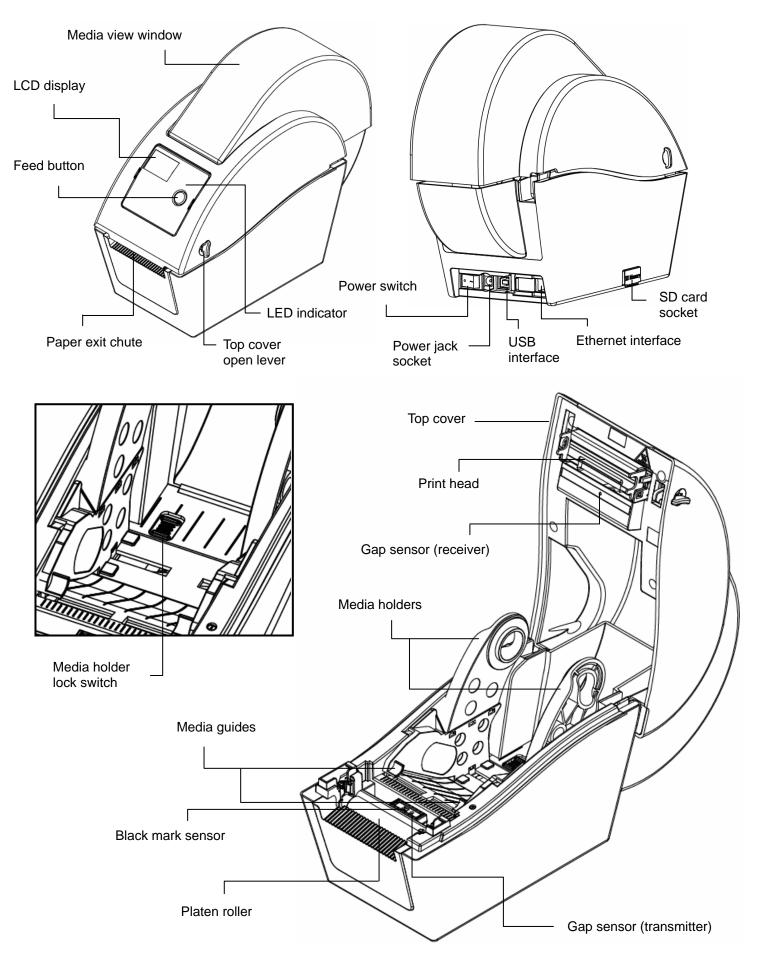

Loading the Media

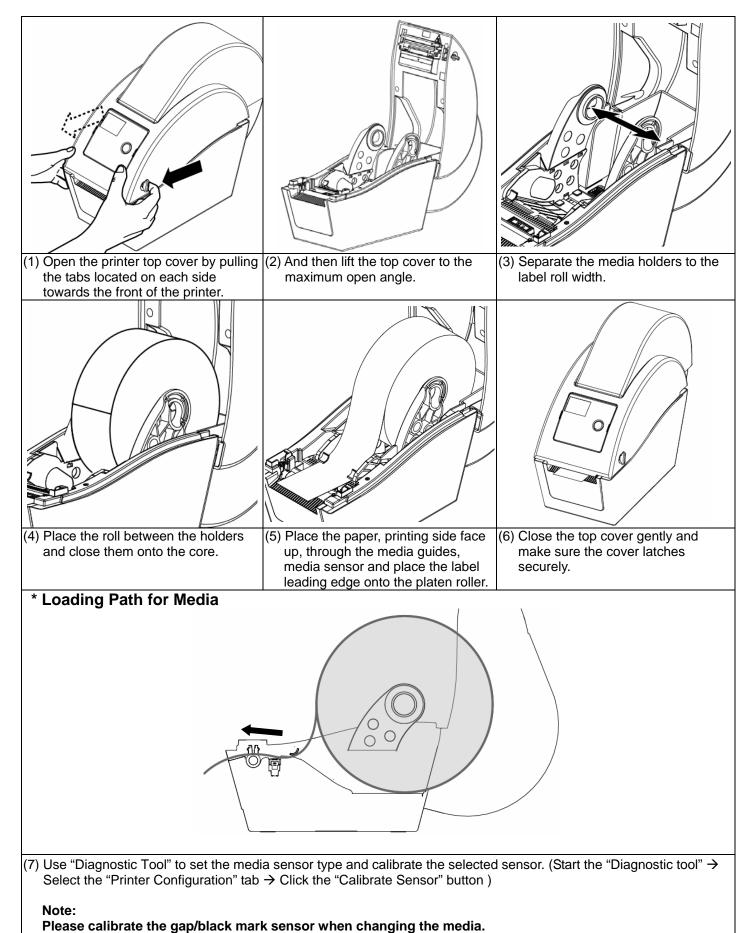

Button Functions

(1) Feed labels

When the printer is ready, press the button to feed one label to the beginning of next label.

(2) Pause the printing job

When the printer is printing, press the button to pause a print job. When the printer is paused the LED will blink green. Press the button again to continue the printing job.

Diagnostic Tool


The Diagnostic Utility is a toolbox that allows users to explore the printer's settings and status; change printer settings; download graphics, fonts, and firmware; create printer bitmap fonts; and to send additional commands to the printer. Using this convenient tool, you can explore the printer status and settings and troubleshoot the printer.

Note: This utility works with printer firmware V6.00 and later versions.

Start the Diagnostic Tool:

(1) Double click on the Diagnostic tool icon DiagToolexe to start the software.

(2) There are four features (Printer Configuration, File Manager, Bitmap Font Manager, Command Tool) included in the Diagnostic utility.

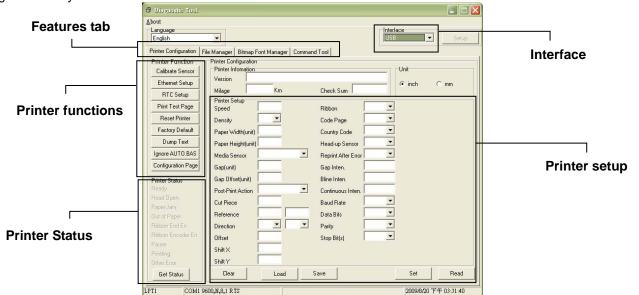

(3) The detail functions in the Printer Function Group are listed as below.

Printer Function	Function	Description
Calibrate Sensor	Calibrate Sensor	Calibrate the sensor specified in the Printer
Ethernet Setup		Setup group media sensor field
	Ethernet Setup	Setup the IP address, subnet mask, gateway for
RTC Setup	Linemet Setup	the on board Ethernet
Print Test Page	RTC Time	Synchronize printer Real Time Clock with PC
Reset Printer	Print Test Page	Print a test page
	Reset Printer	Reboot printer
Factory Default	Treser i iliter	
Dump Text	Factory Default	Initialize the printer and restore the settings to factory default.
	Dump Text	To activate the printer dump mode.
Ignore AUTO.BAS	Dump lext	To activate the printer dump mode.
Configuration Page	Ignore AUTO.BAS	Ignore the downloaded AUTO.BAS program
	Configuration Page	Print printer configuration

^{*} For more information and features about this printer, please refer to the User's Manual inside the CD disk.

P/N: 39-0000001-00LF Page 2 of 2